


## Guideline for Installing the SS10, SS8 Warmers into Thick Countertops

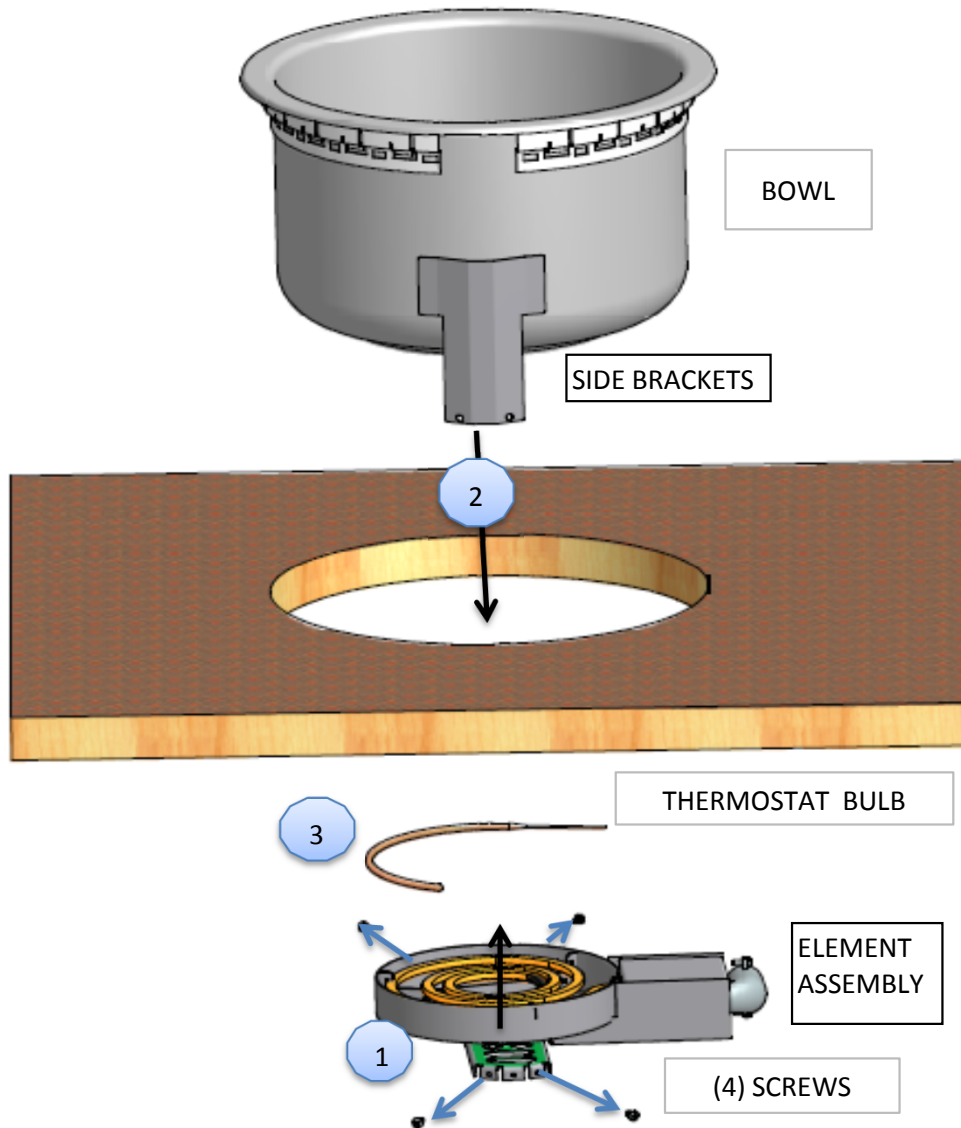

If you are installing a new round warmer in a location that had older units and a thick counter top , the cut out may be smaller than the recommended 11 1/8" (SS10) or 9" (SS8) diameter hole.

If that is the case, and you are having difficulty angling the unit into the opening, follow these steps to install your unit only if cutting the opening larger is not an option.

2

**Step 1:** Remove the (4) **SCREWS** that attach the **ELEMENT CUP ASSEMBLY** to the **SIDE BRACKETS** that are located on the side of the **BOWL**. Separate the **BOWL** from the **ELEMENT ASSEMBLY & THERMOSTAT BULB**.

**Step 2:** Insert the **BOWL** into the countertop opening. **DO NOT** apply caulk or attach the **BOWL** to the countertop at this time.

**Step 3:** From below, reattach the **ELEMENT ASSEMBLY** and **THERMOSTAT BULB** to the **BOWL** with the **SCREWS** from **Step 1**. Rotate the **BOWL** if you need to access the holes in the **SIDE BRACKETS**. Make sure **THERMOSTAT BULB** is properly seated in the **BULB CLAMPS** and is flush against the underside of the **BOWL** bottom. Take extra care not to pinch the **THERMOSTAT BULB**. Tighten the Screws.

**Step 4:** Follow the remaining installation instructions that were provided with your unit for sealing and attaching your unit to the counter top.